

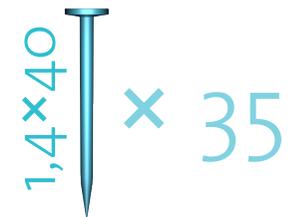
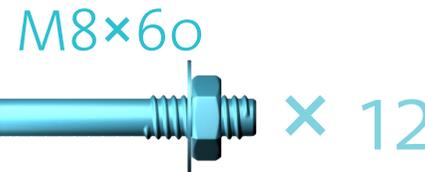
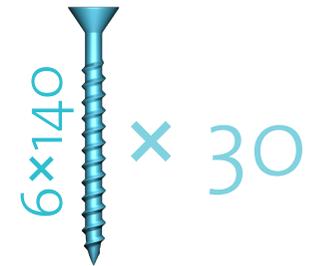
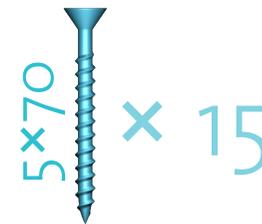
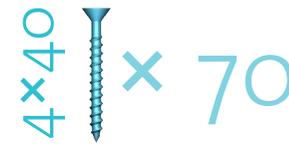
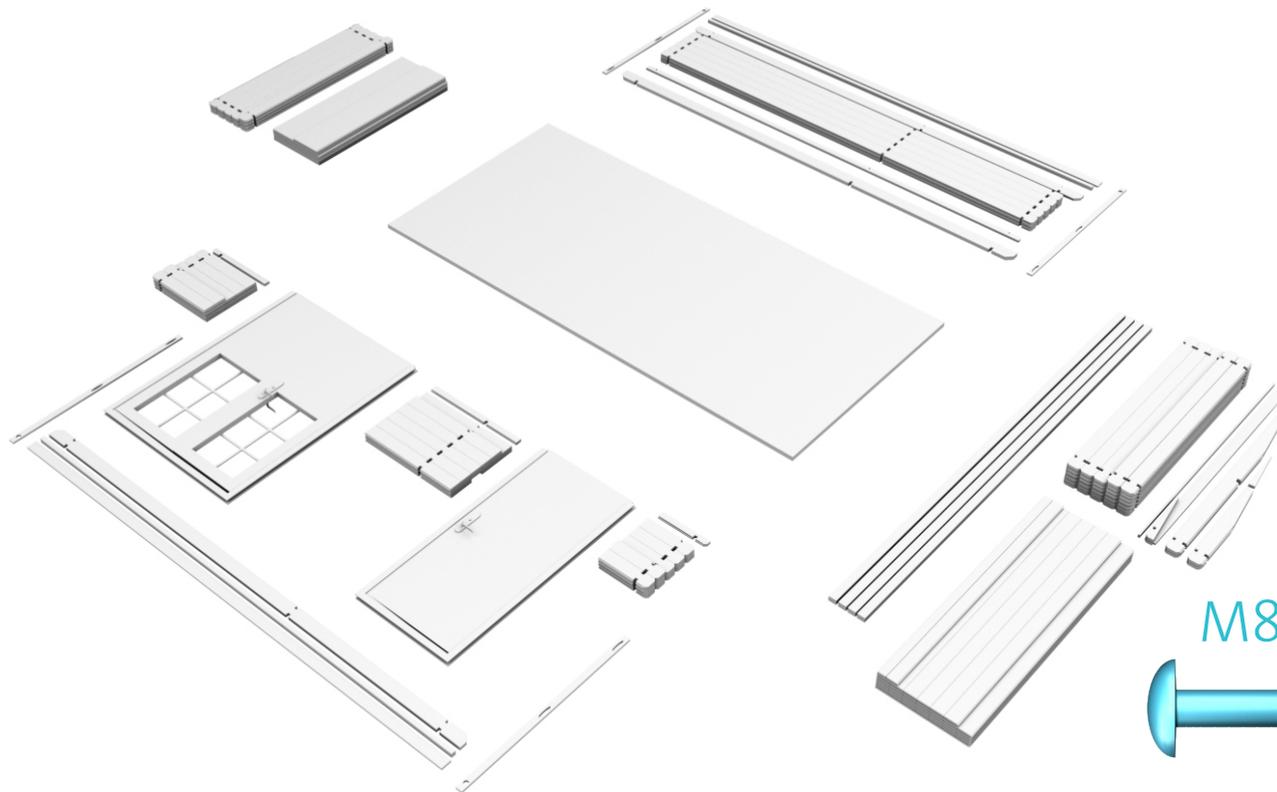
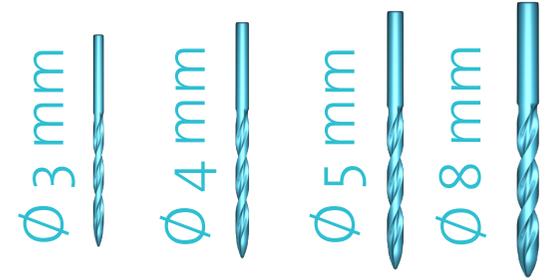
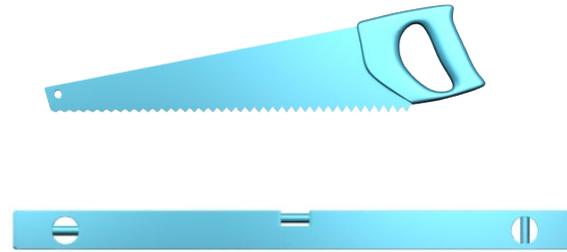
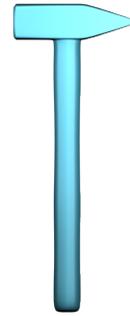
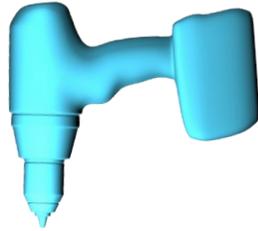


PREPARE THE GROUND, UNWRAP THE PACKAGE,
LAY OUT THE COMPONENTS, FIND THE TOOLS.

ANNIKA II 28



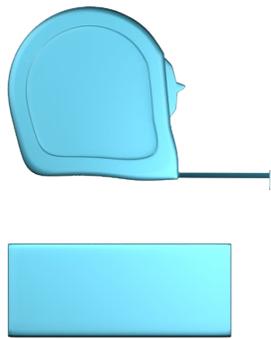


LAY OUT THE FOUNDATION BEAMS AND SQUARE IT BY MEASURING FROM CORNER TO CORNER.

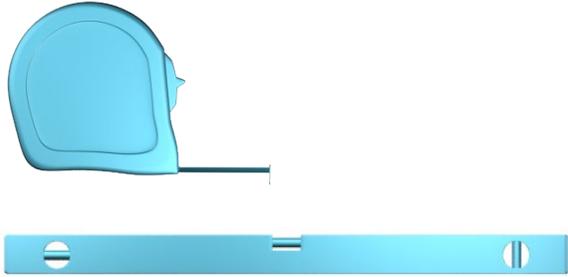

$AB=CD$




ANNIKA II 28

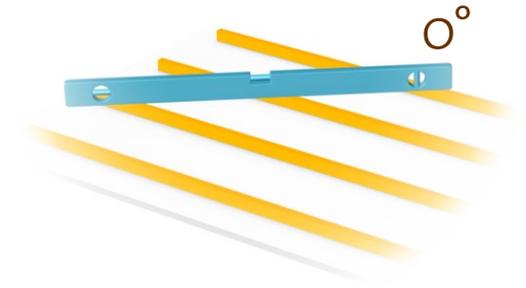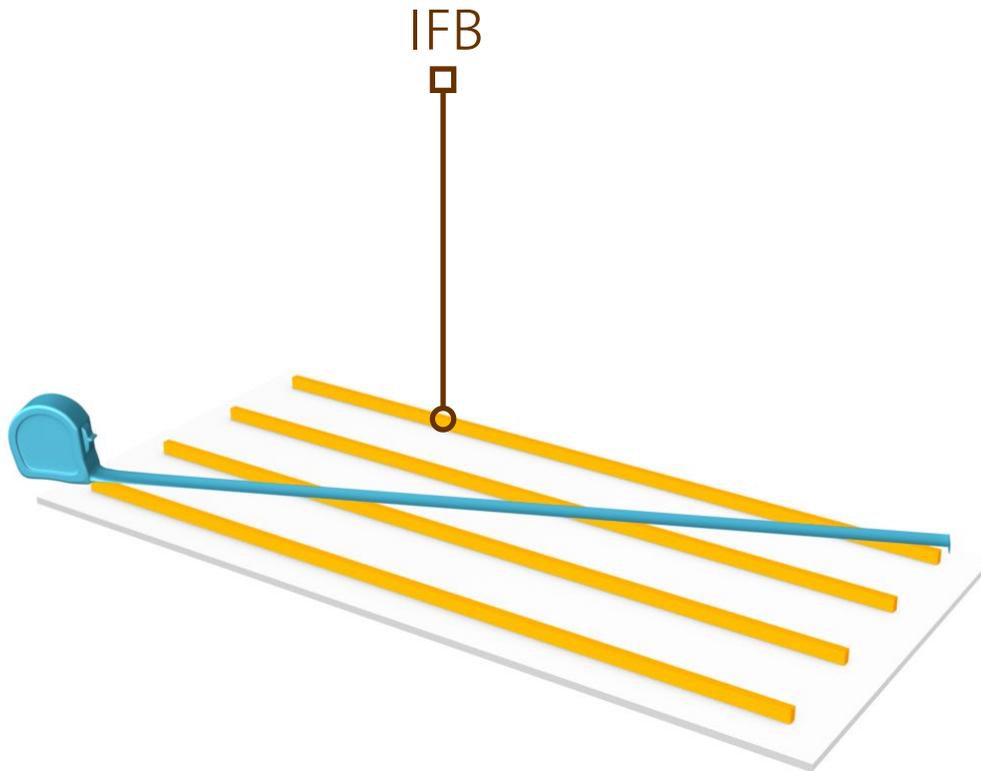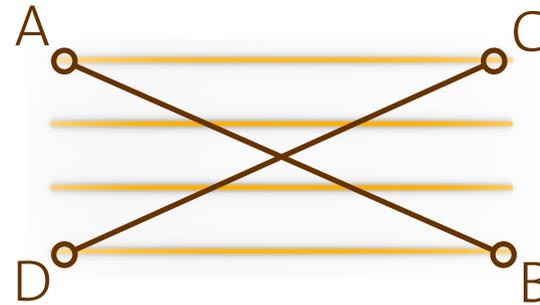

MAKE SURE THAT THE FOUNDATION IS INSTALLED ON A LEVEL SURFACE. CHECKING ALL DIRECTIONS, INCLUDING CORNER TO CORNER. 3%

LAY OUT THE **BOTTOM** LOGS,
ATTACH TO THE FOUNDATION.




ANNIKA II 28

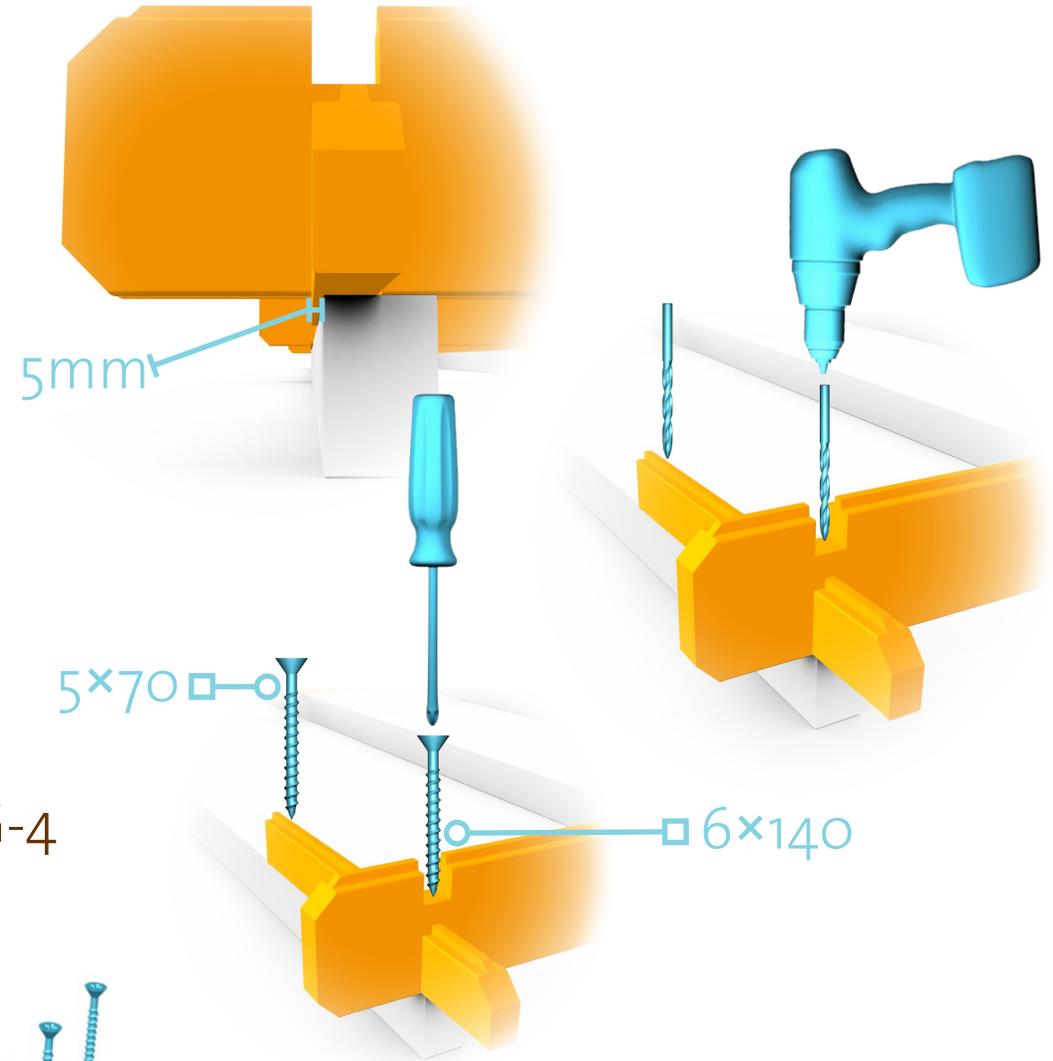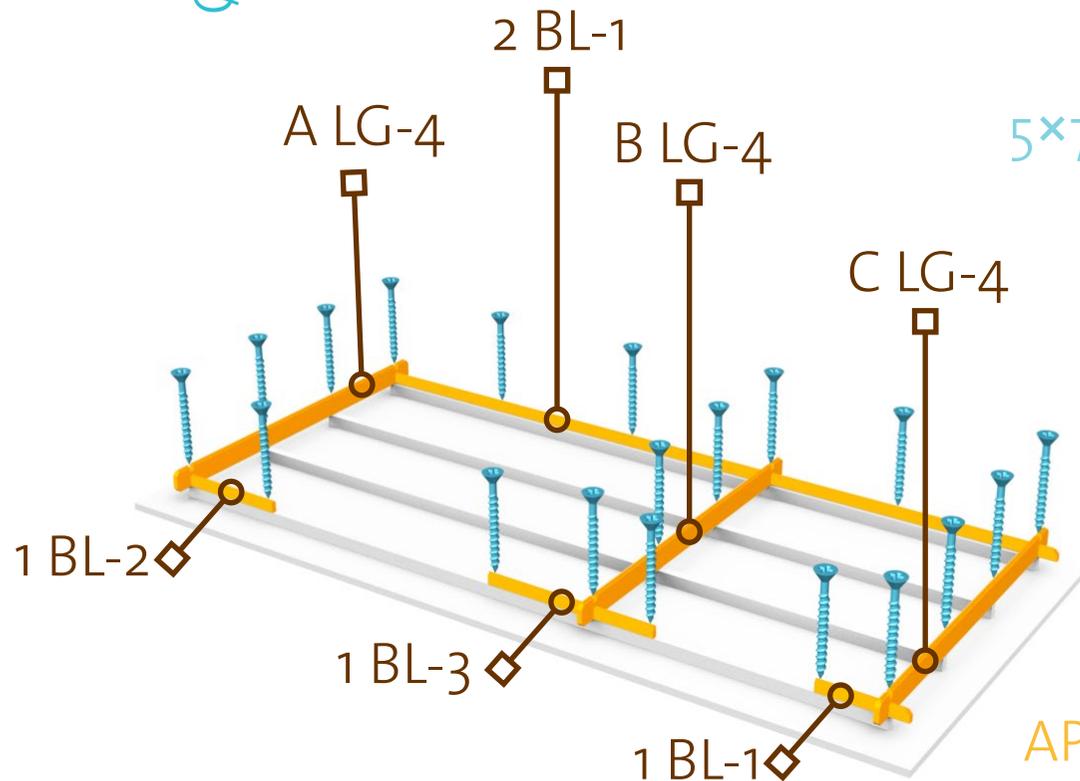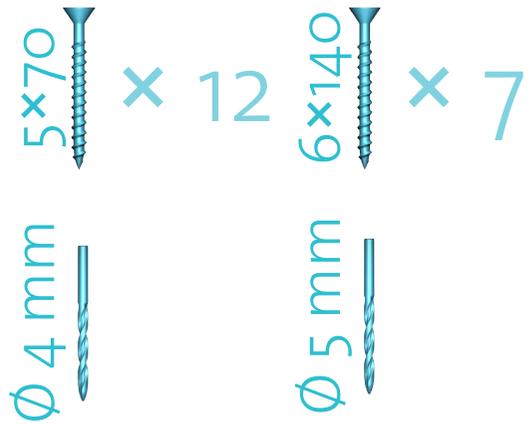

THE WALL **LOGS** WILL HANG OVER
THE FOUNDATION **BEAMS** BY
APPROXIMATELY 5MM. THIS OVERHANG
IS DESIGNED AS A RAIN DRIP. **5%**


ATTACH THE FIRST ROW OF
WALL LOGS INTO THE BOTTOM
LOGS WITH **SCREWS**.

ANNIKA II 28

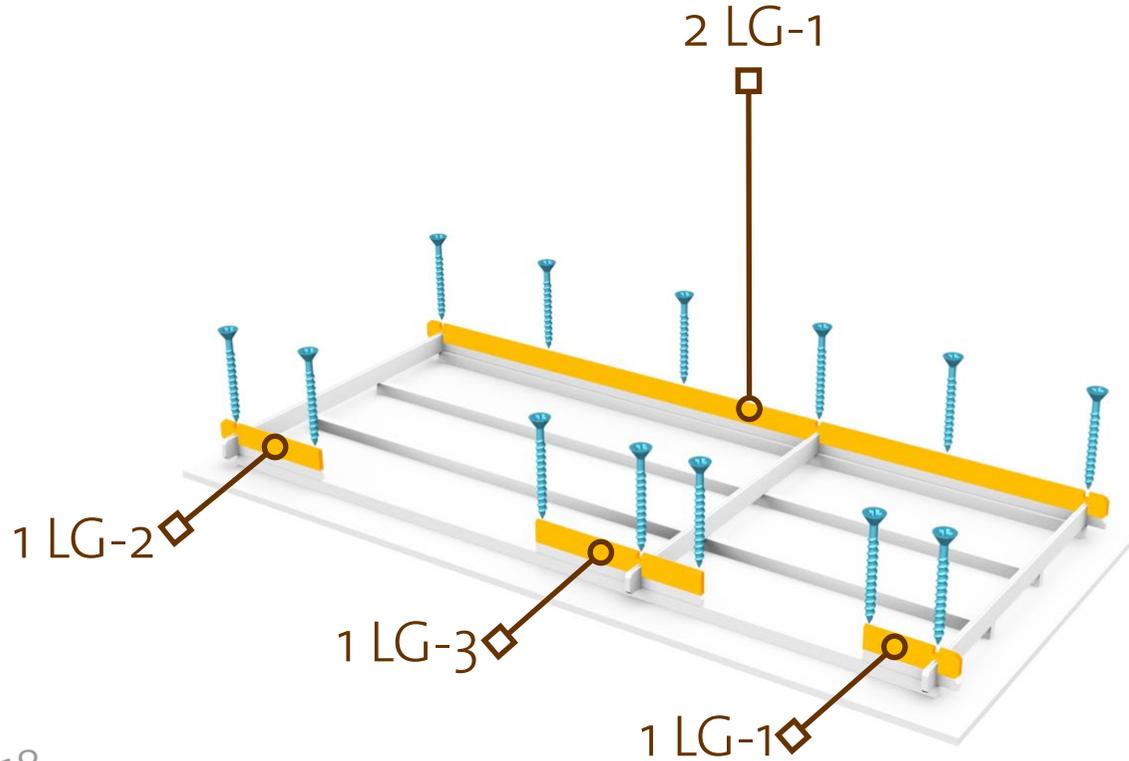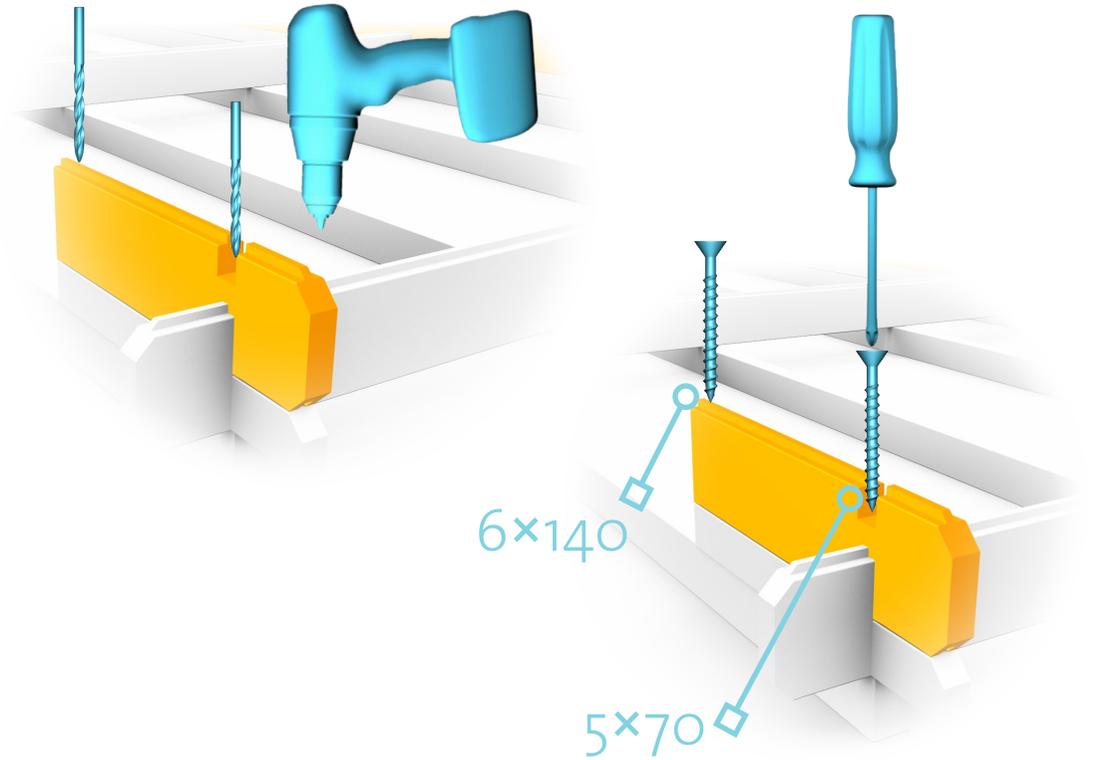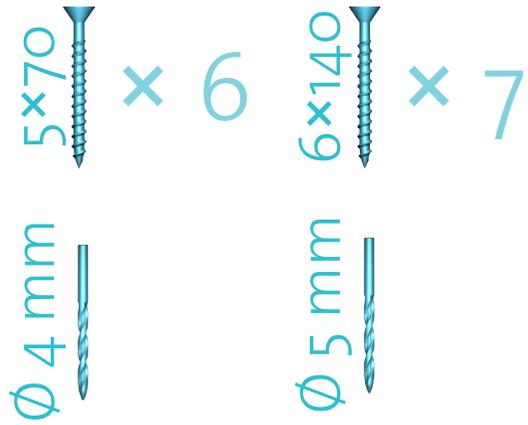



AFTER PLACING 3-4 ROWS OF WALL LOGS, TAP EACH WALL LOG IN PLACE USING A HAMMER AND THE HITBLOCK PROVIDED, TO TIGHTEN THE LOGS.

ANNIKA II 28

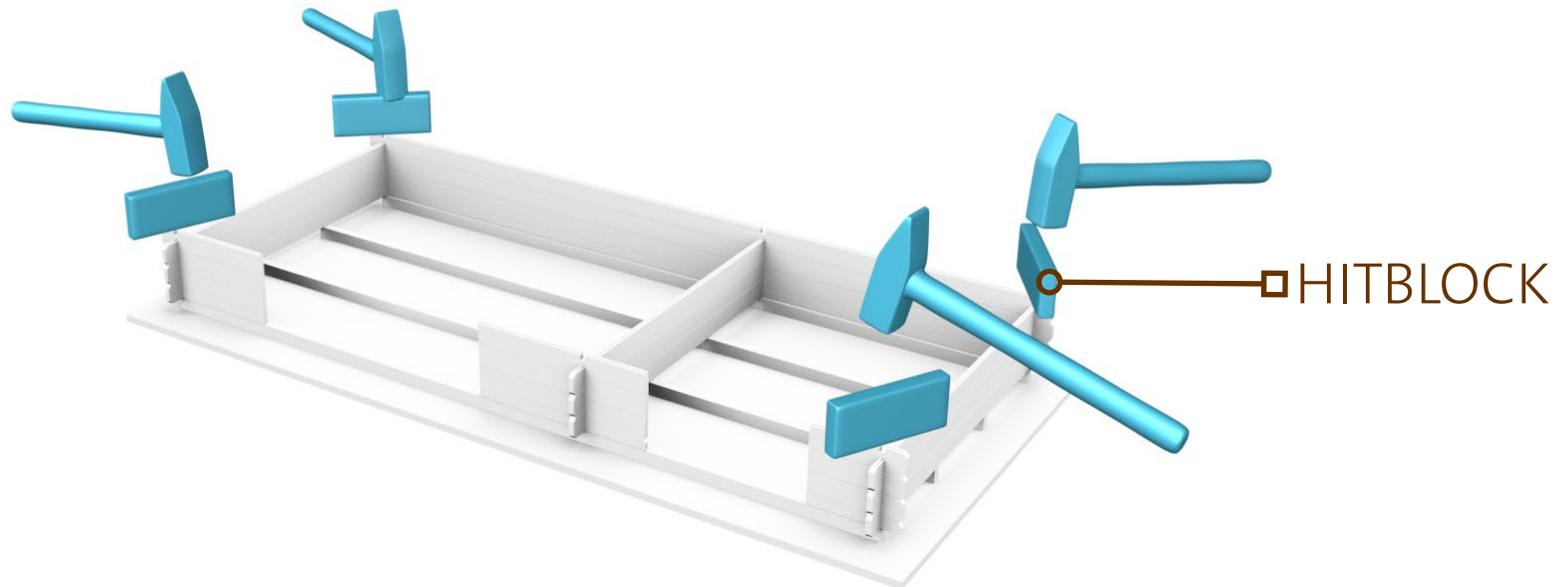


SLIDE THE DOOR IN,
ATTACH THE HANDLE.

ANNIKA II 28

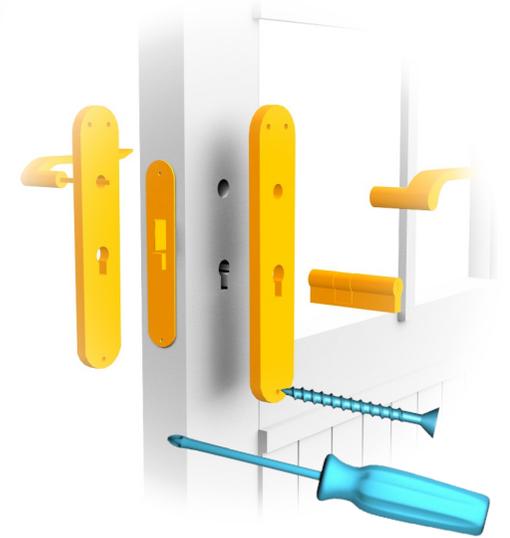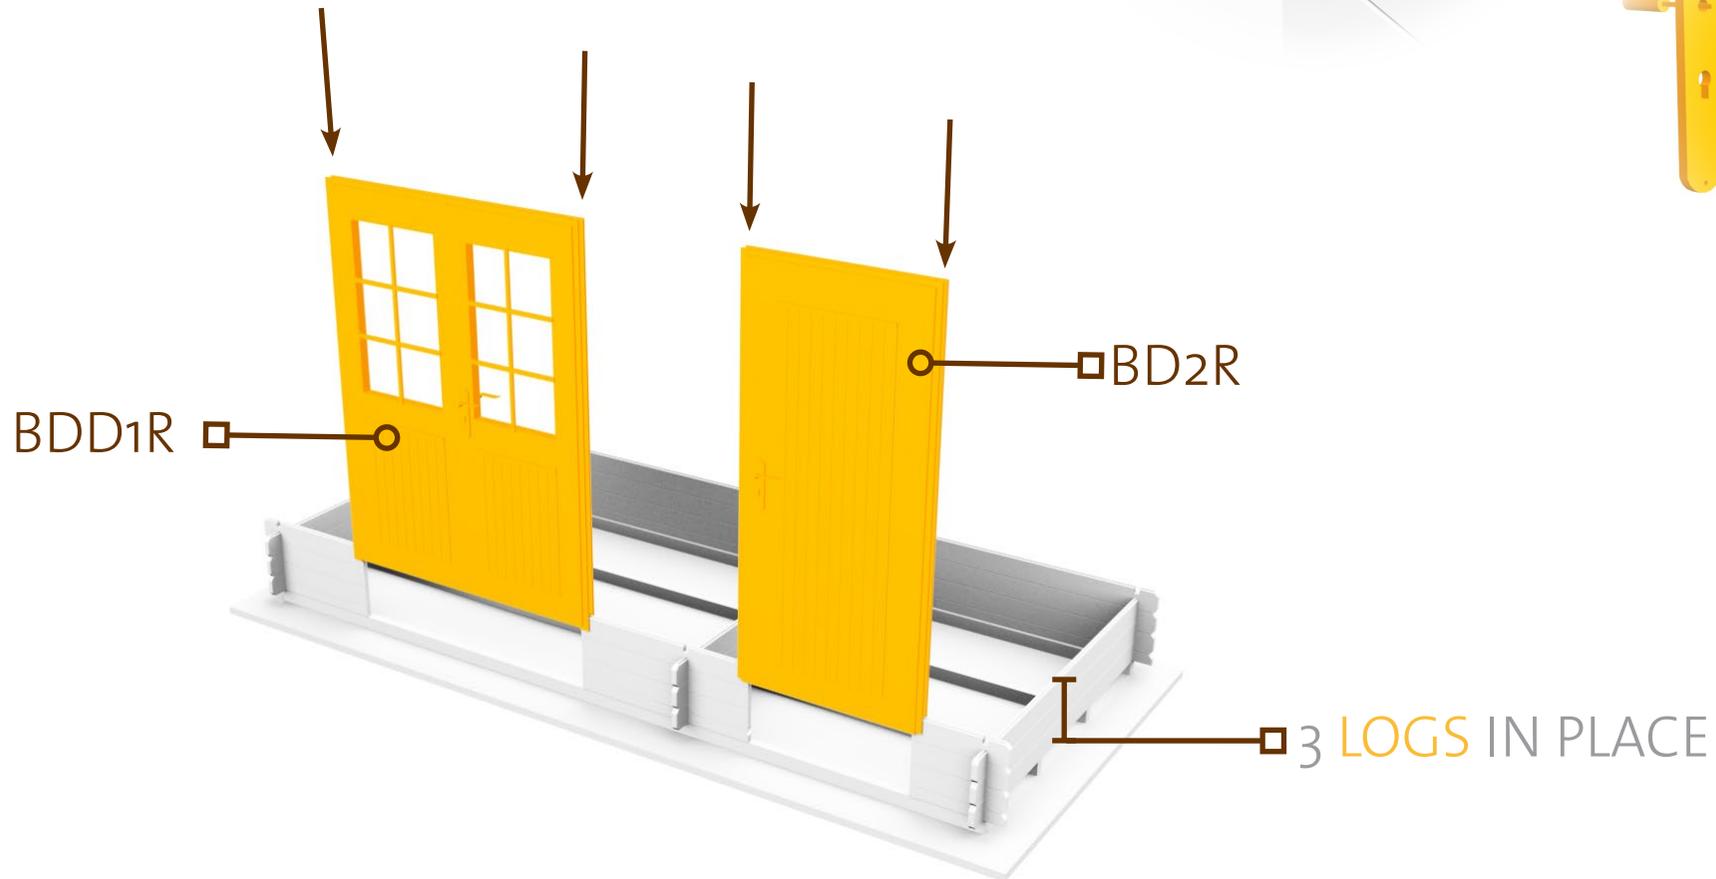

DON`T FORGET TO
TIGHTEN THE LOGS AFTER
EVERY 3-4 ROWS.

ANNIKA II 28

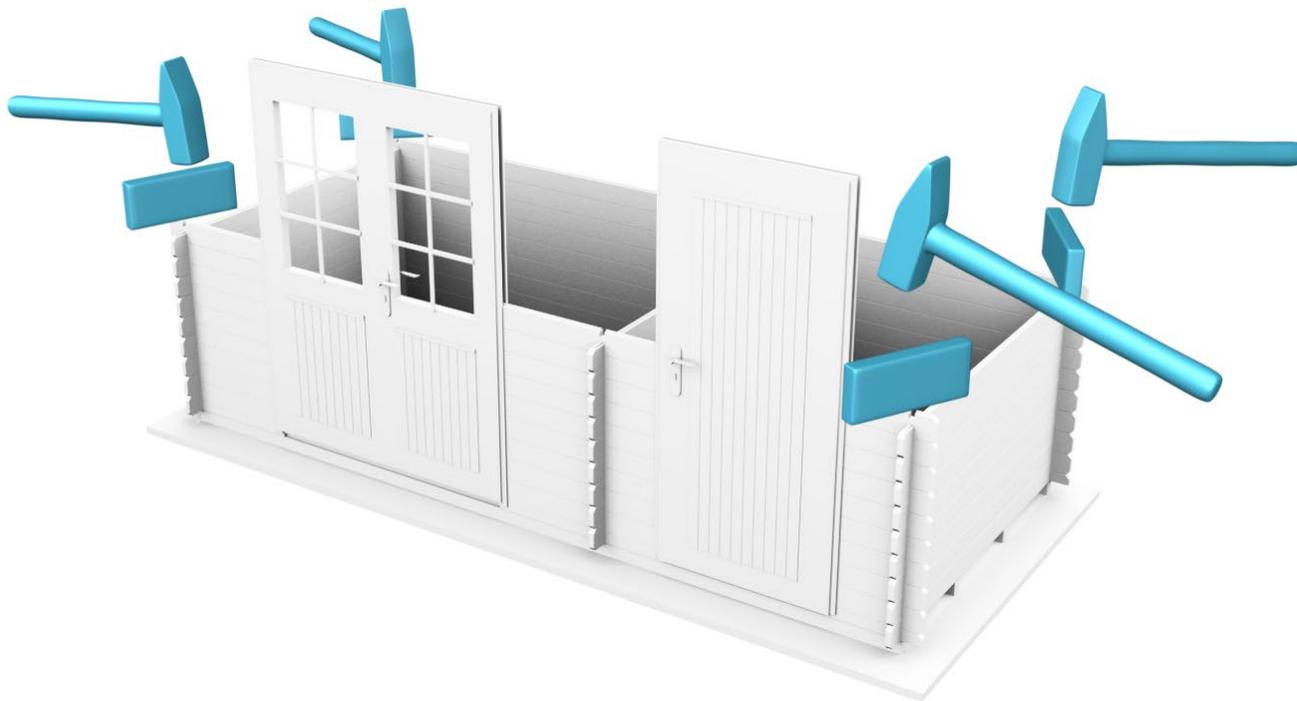


INSTALL THE GABLES WITH LONG SCREWS TO THE WALL LOGS ON THE FRONT AND REAR WALLS.

ANNIKA II 28

6x140 × 12



Ø 5 mm

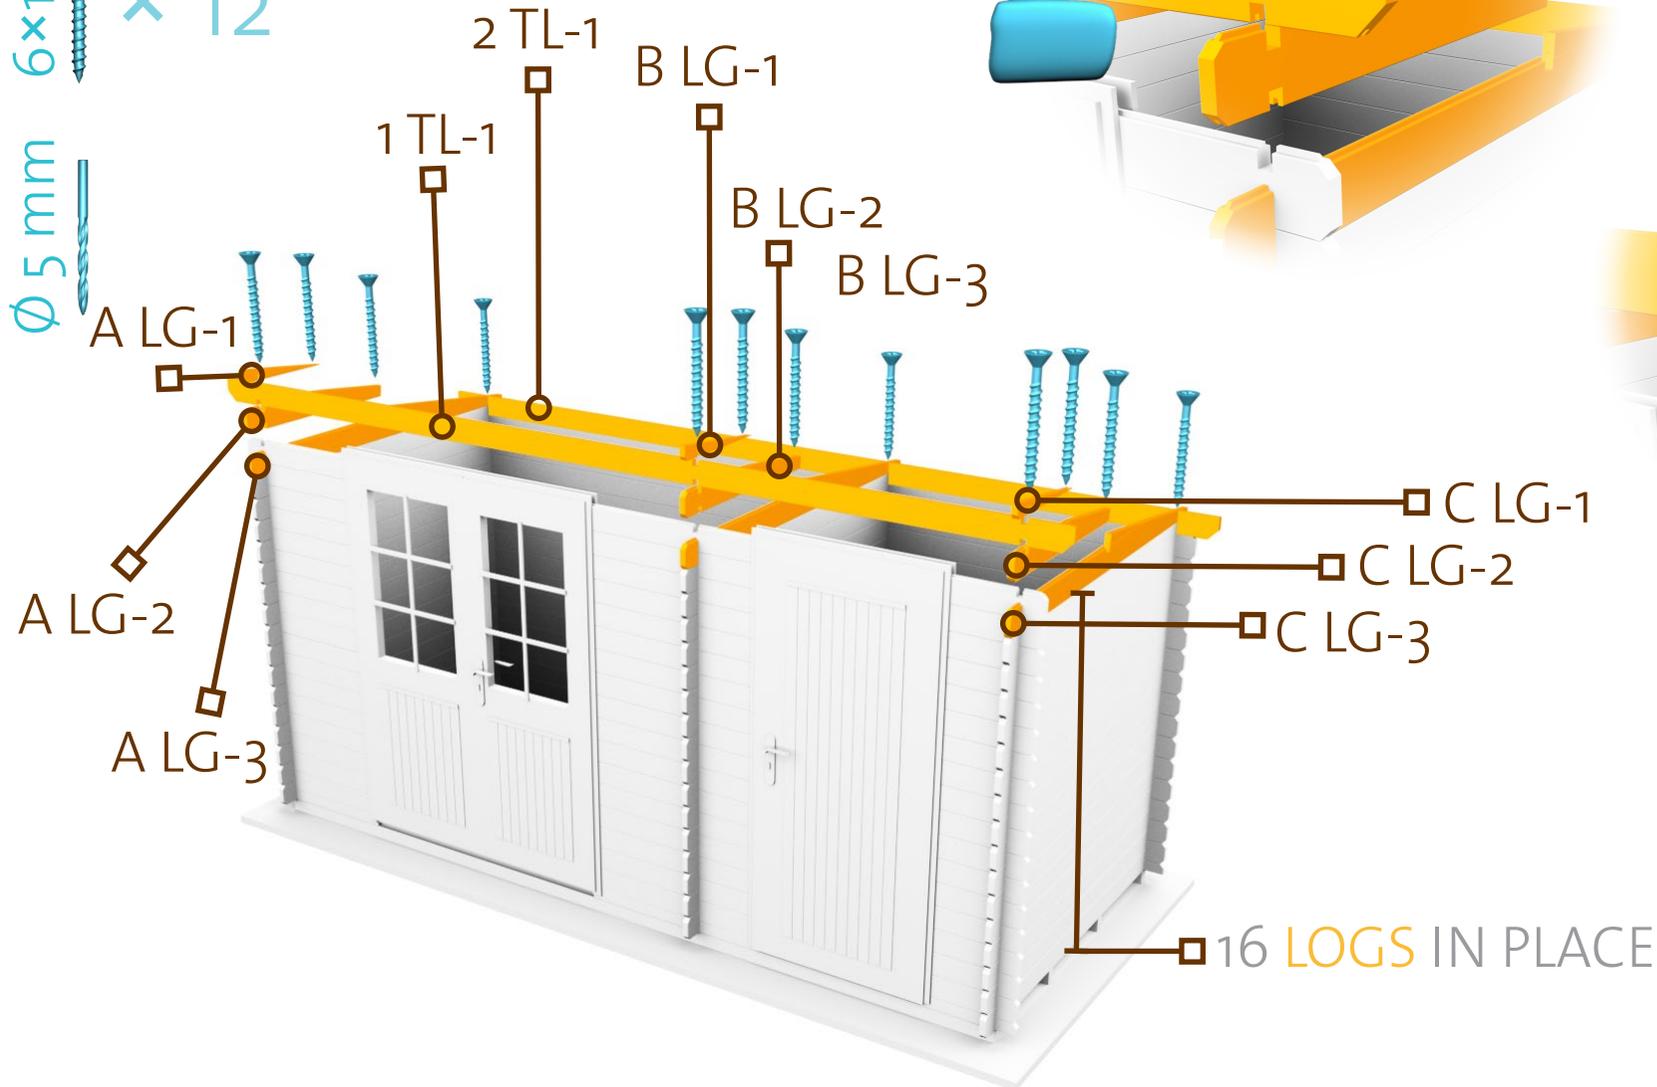

INSTALL THE ROOF PURLINS AND ATTACH THEM WITH SCREWS.

ANNIKA II 28



6x140 × 3
Ø 5 mm

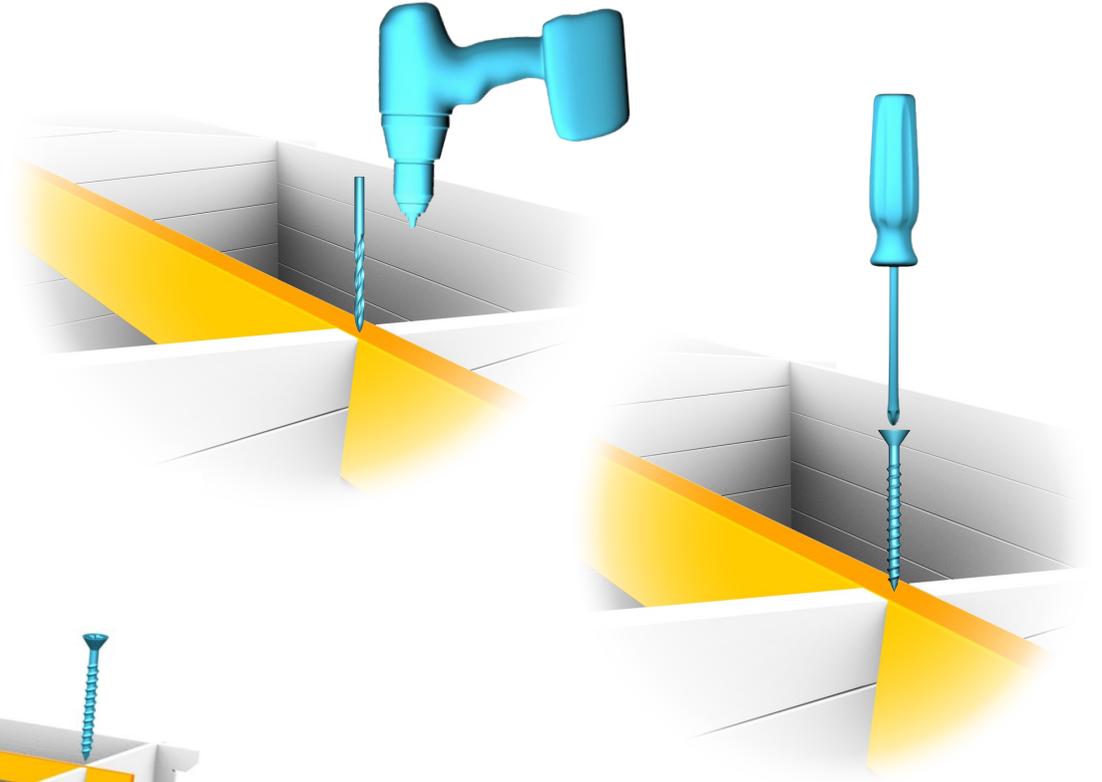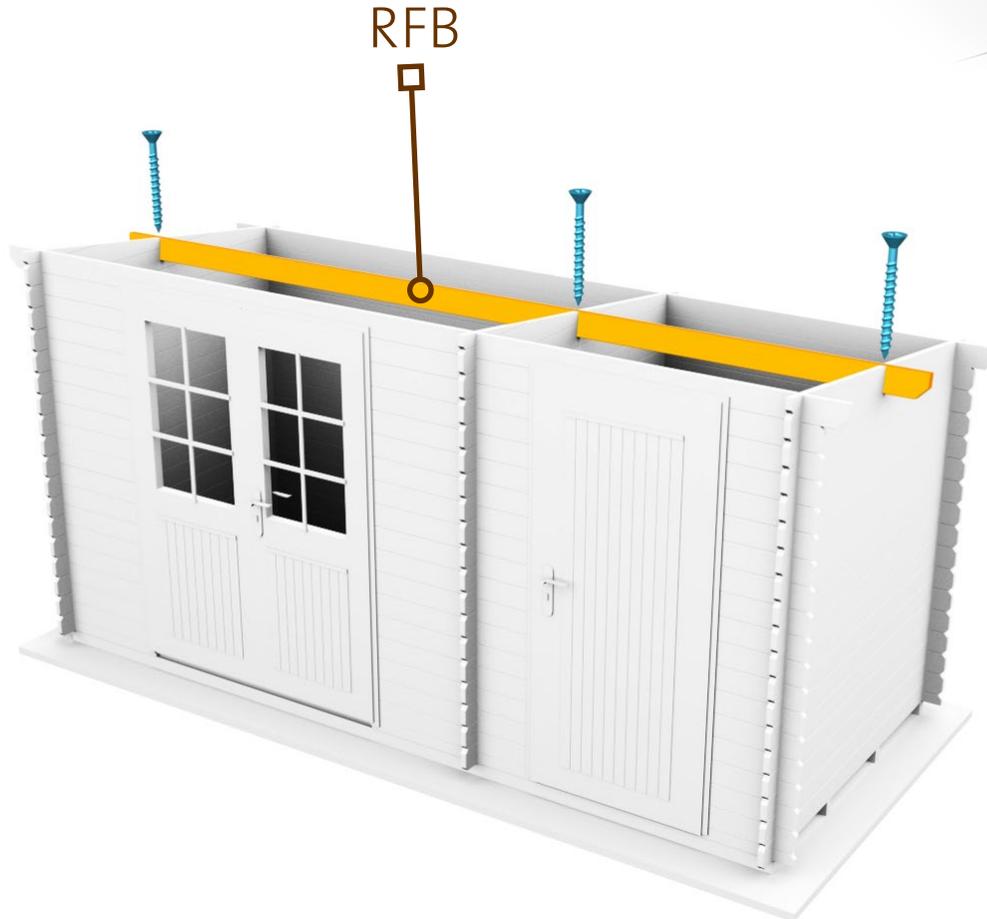

PLACE THE FIRST **ROOFBOARD** FLUSH WITH THE END OF THE **PURLINS** AND ATTACH WITH 6 SCREWS, 3 INTO **EACH** NEXT, SAW THE LAST **BOARD** TO MAKE IT FIT.

ANNIKA II 28


4x50  x 135

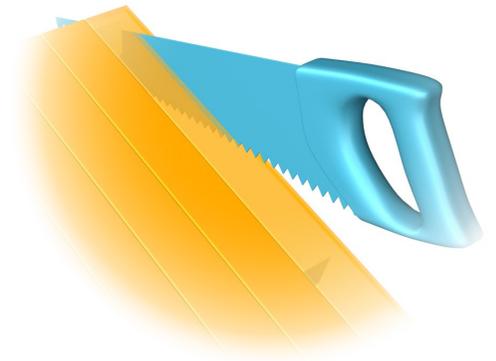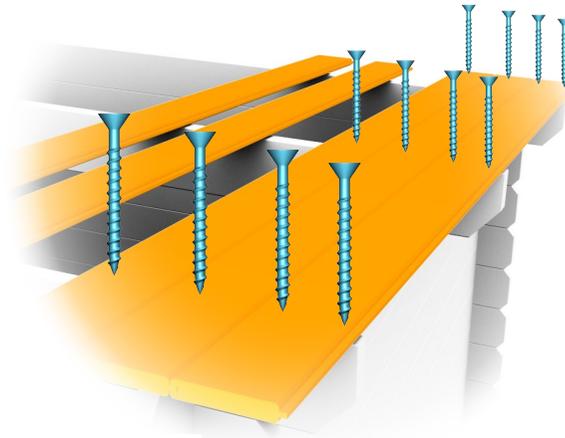

FOR THE FASCIA TRIMS INSERT
SCREWS AFTER EVERY 0,5 METERS.

ANNIKA II 28

4x40
× 44

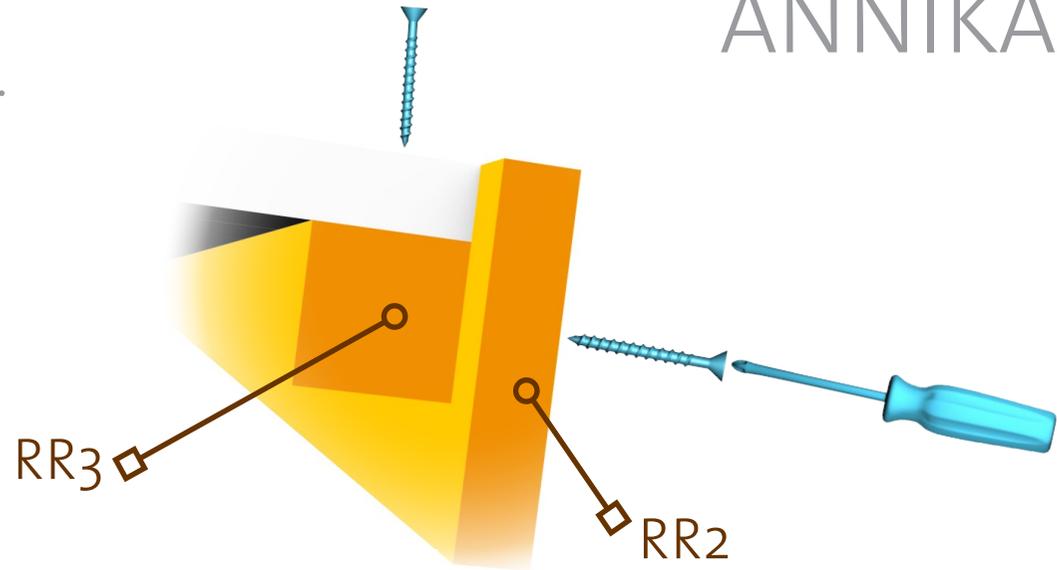




EAVES EDGES GO ON TOP OF THE ROOFING*.

*(NOT INCLUDED)

ANNIKA II 28


4x40
×20

Ø 3 mm

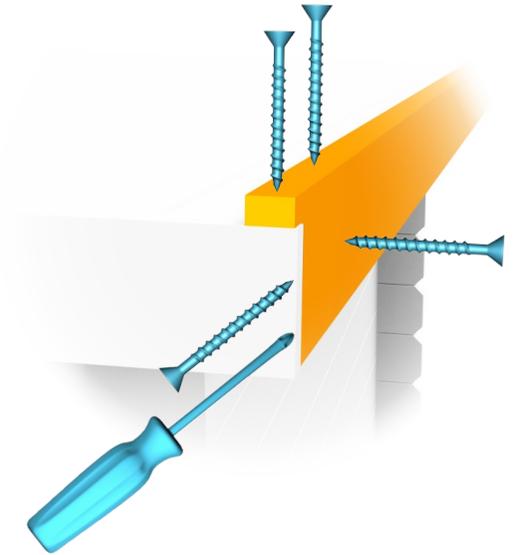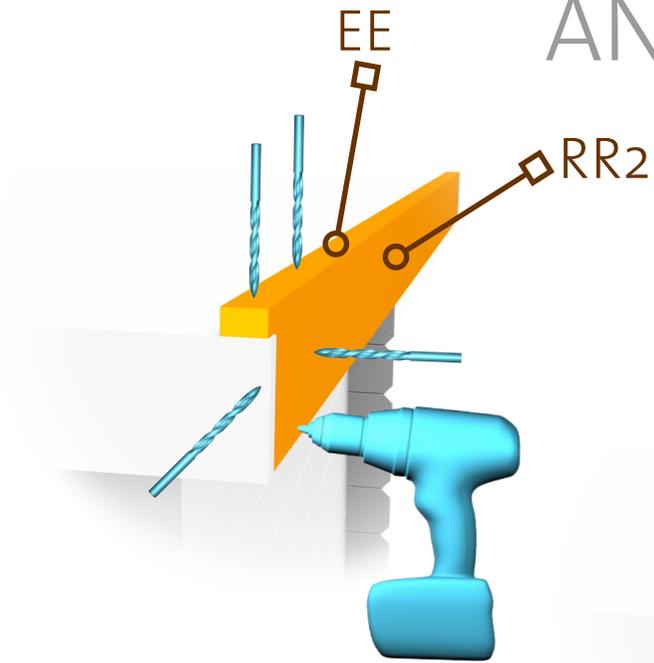
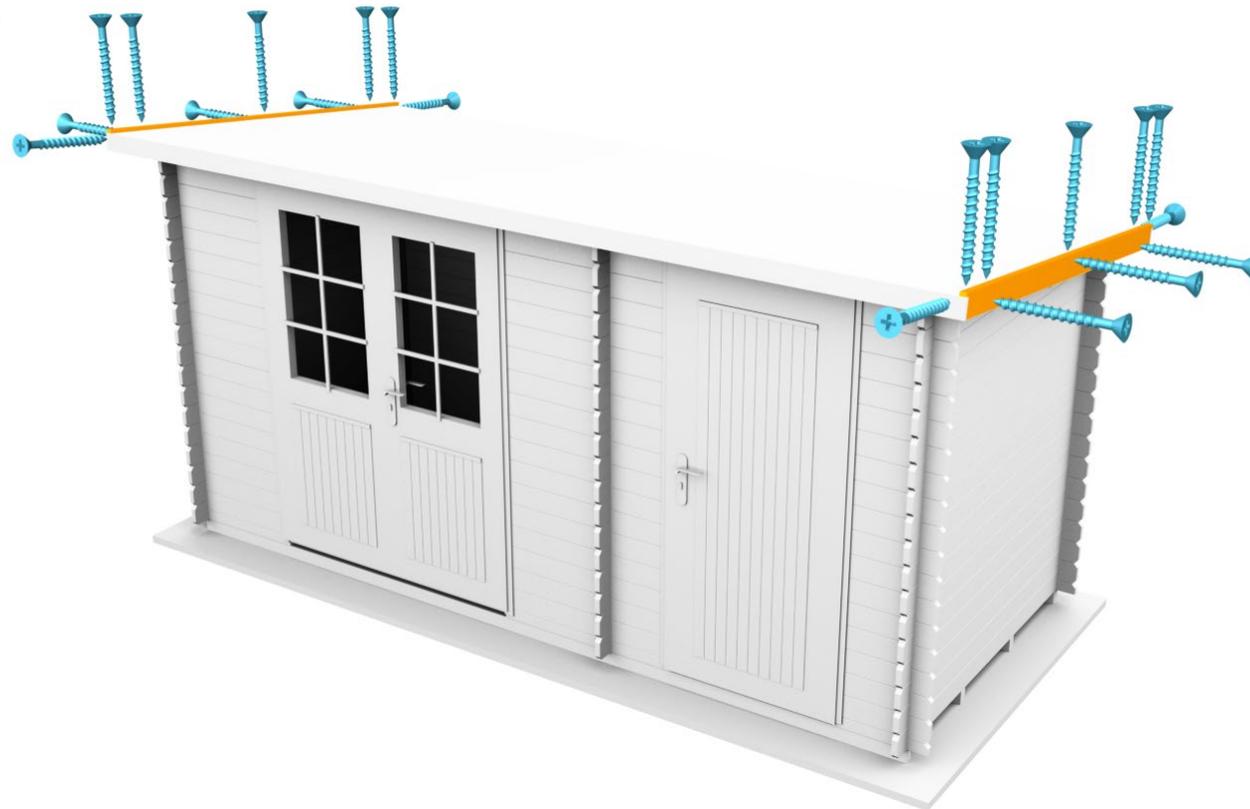


14 SCREWS INTO THE FIRST FLOORBOARD,
7 INTO EACH NEXT, SAW THE
LAST BOARD TO MAKE IT FIT.

4x50
× 160

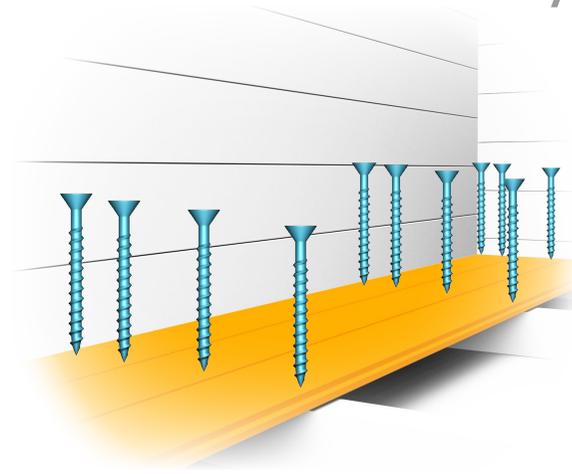


ANNIKA II 28

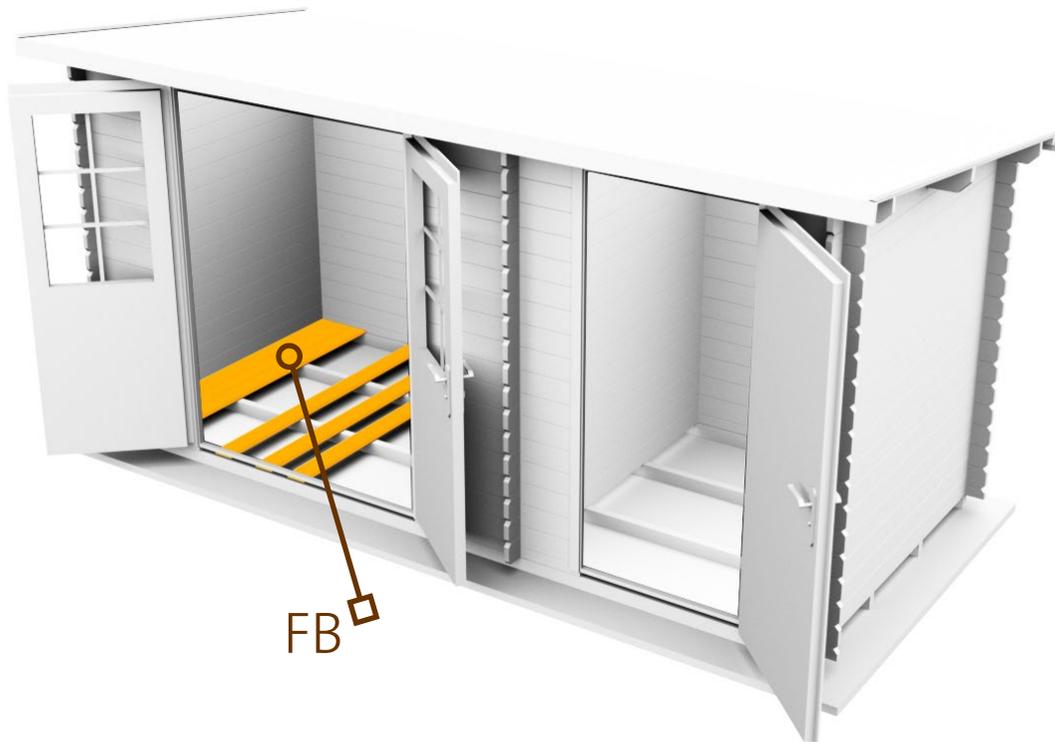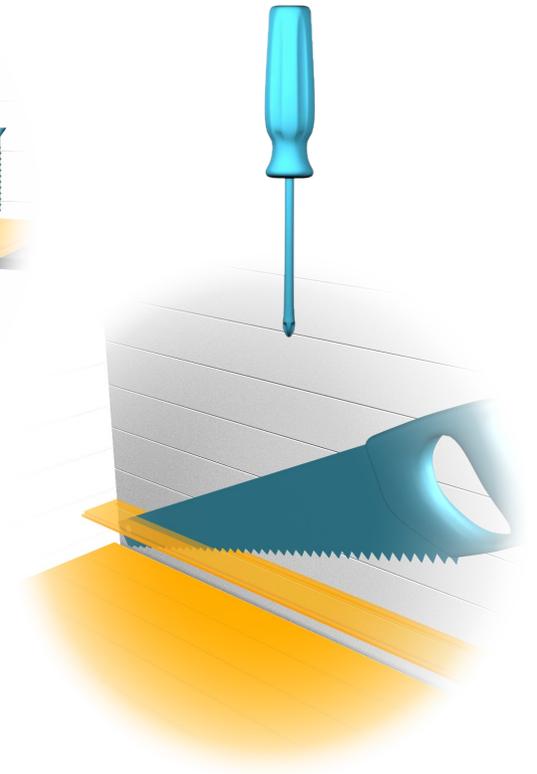

SAW THE **BASEBOARDS**
AND ATTACH WITH NAILS
AT **EVERY 0,5** METERS.


1,4×40
× 35

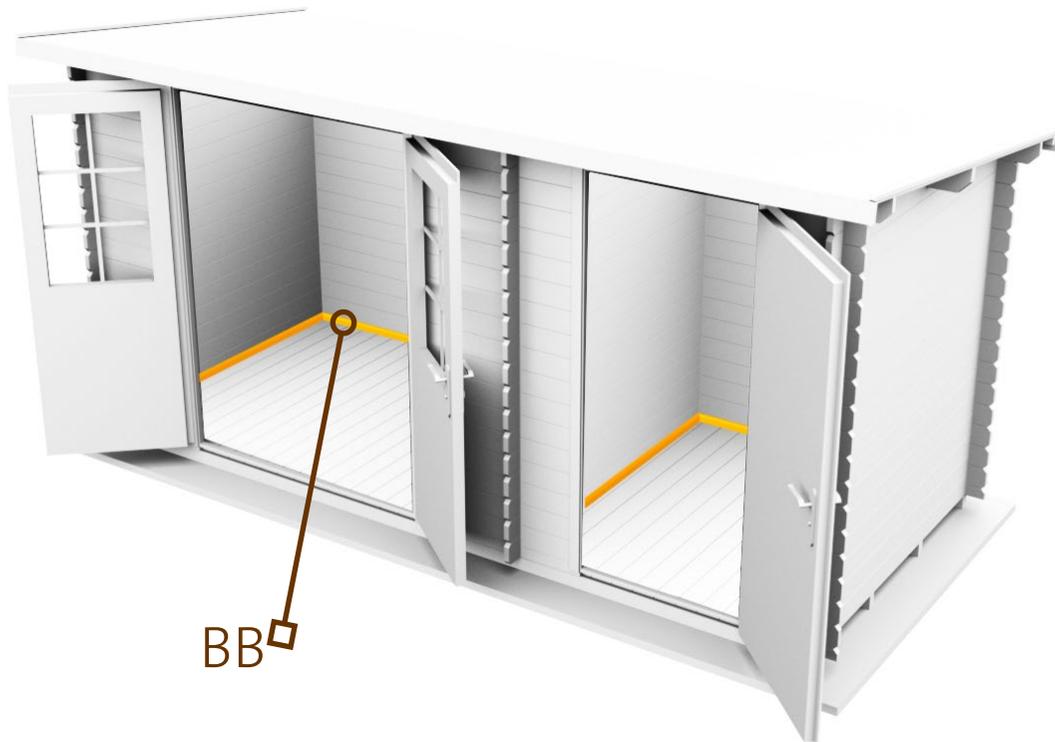


DRILL THROUGH THE WALL, HOLE MUST BE AT THE BOTTOM OF THE OVAL, ATTACH WITH BOLT.

M8x60 × 12

Ø 8 mm

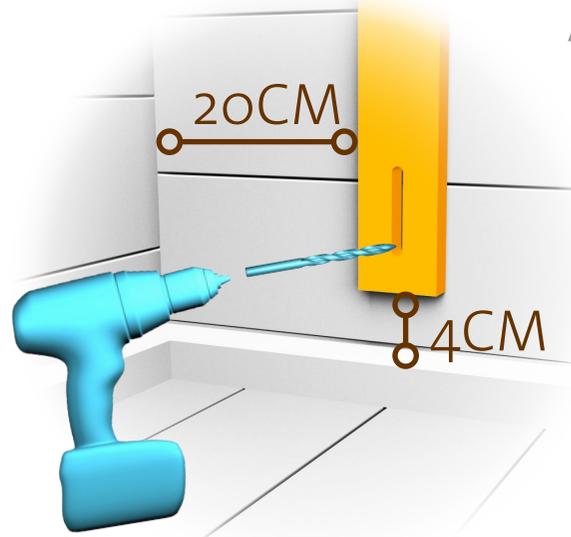

ANNIKA II 28




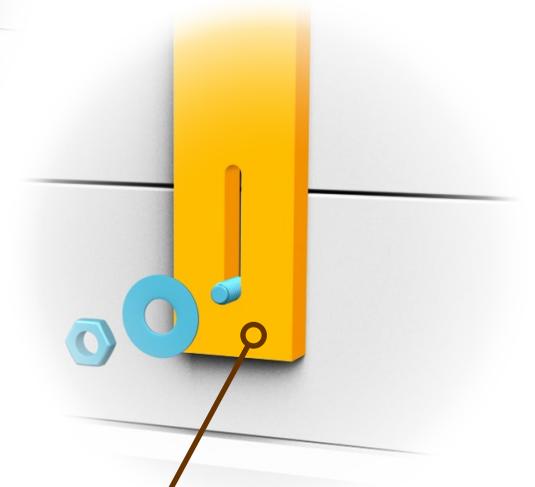


WINDBOARD





IF DOOR IS TILTED,
PUSH THE DOOR FRAME SO
THAT ALL CORNERS ARE 90° .

ANNIKA II 28

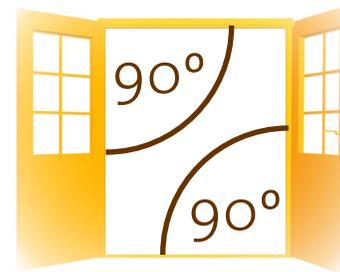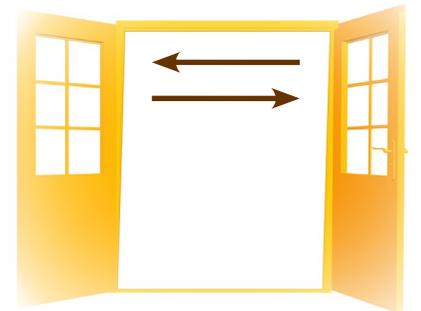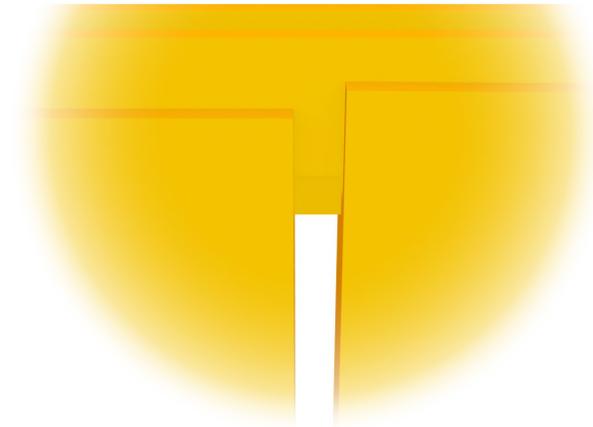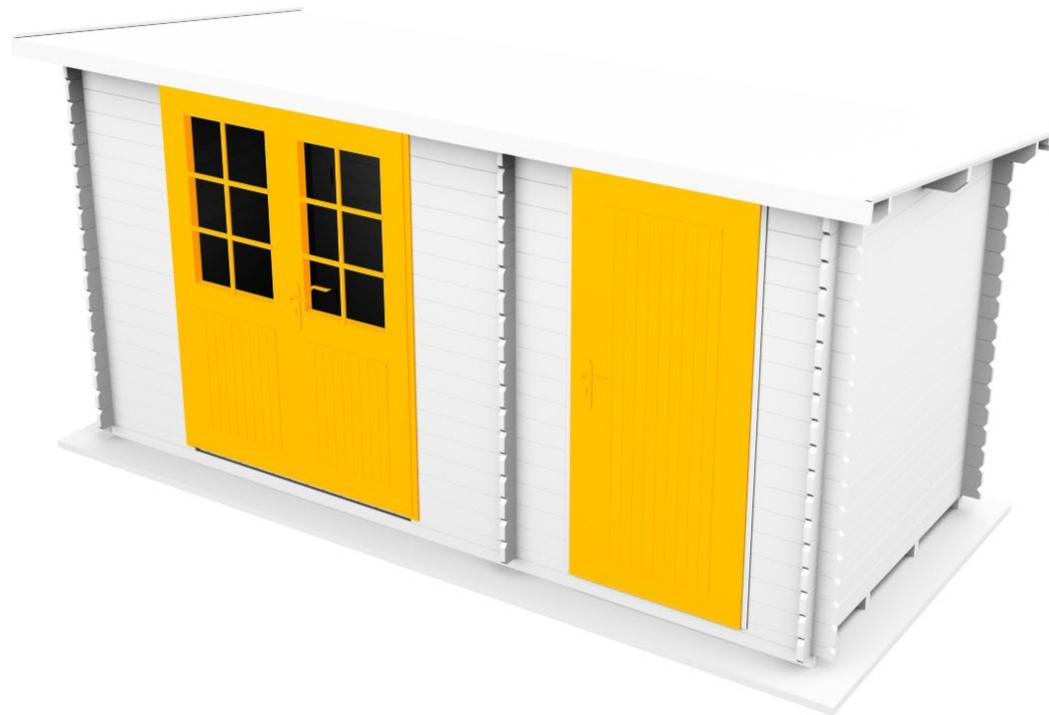

IF **DOORS** ARE IN DIFFERENT HEIGHTS
OR THERE IS A GAP **BETWEEN** THEM,
ADJUST 3 SCREWS ON DOOR HINGES.

ANNIKA II 28

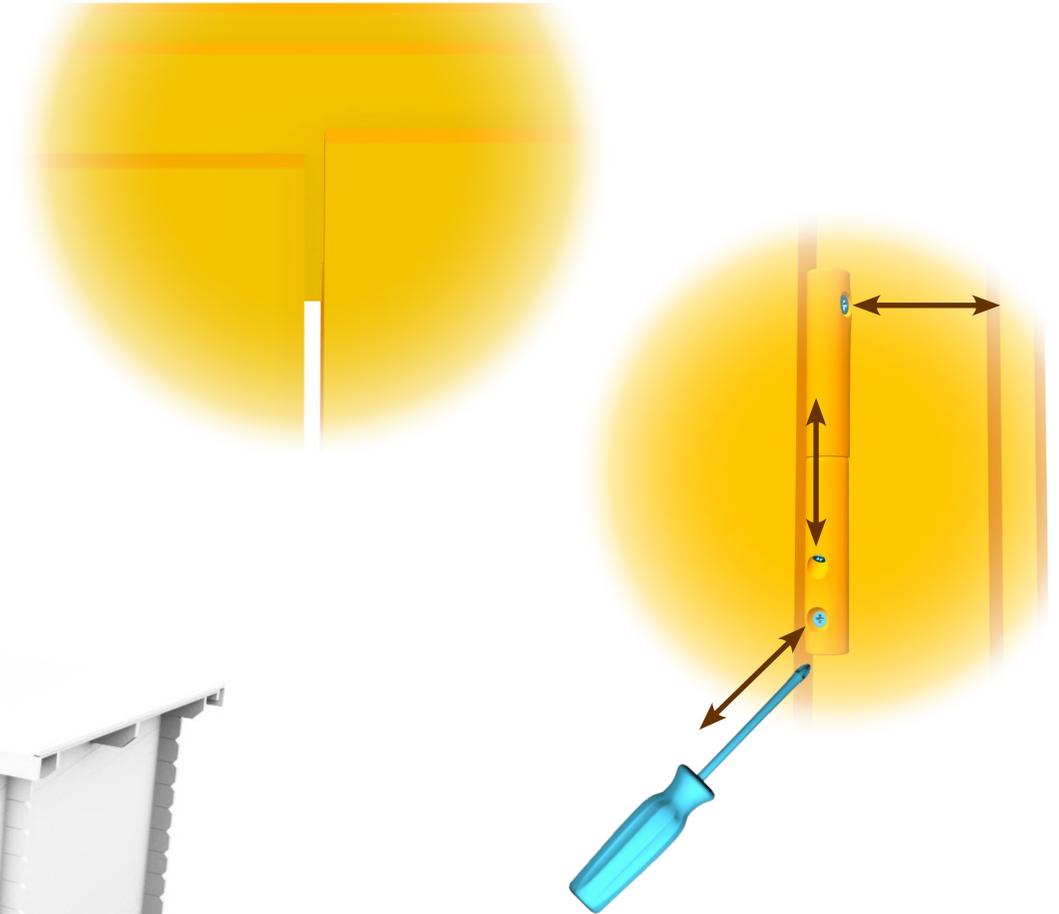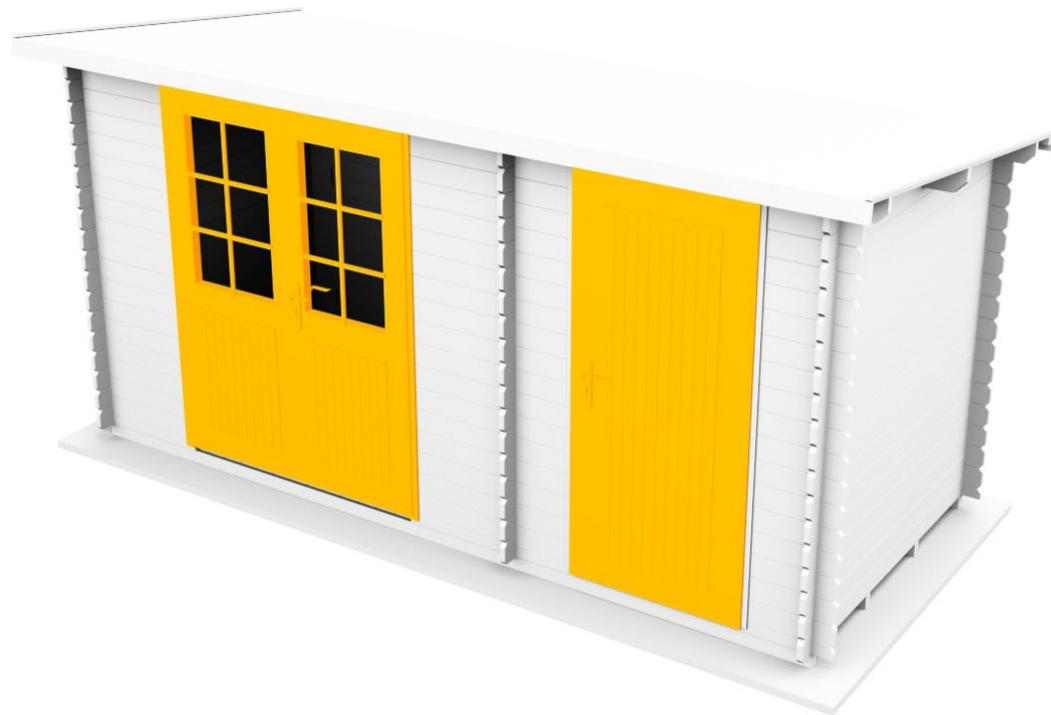

WHEN THE **HOUSE** IS ASSEMBLED, YOU SHOULD **COVER** THE TIMBER WITH **WOOD** PROTECTIVE SEAL, PAINT OR **STAIN** AS SOON AS POSSIBLE TO AVOID DETERIORATION TO THE **WOOD**.

ANNIKA II 28

